



# Casio Digital Watch Teardown

A complete step by step guide to teardown a Casio Digital Watch.

Written By: Cooper





## TOOLS:


- [1.5 mm Phillips Screwdriver](#) (1)
-

## Step 1 — Casio Digital Watch



- This is a teardown of a Casio Digital Watch down to the internal circuitry.
- You will need a small Phillips screwdriver for this teardown.

## Step 2 — Remove the Case

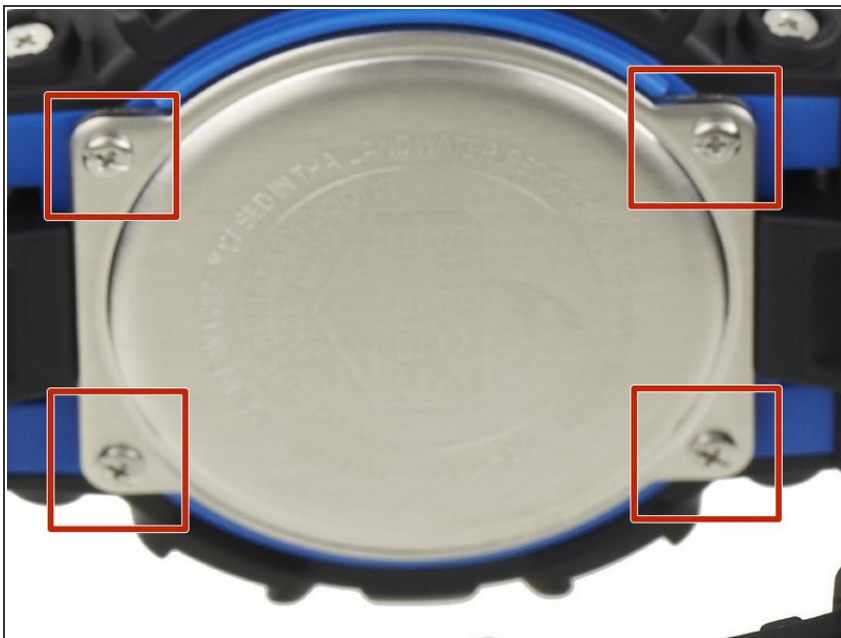

- Carefully remove the four screws on the backside of the watch.
- You will need an extremely small screwdriver. A screwdriver to repair glasses would work.




### Step 3 — Gently Push out the Screen




- Press your fingers on the screen and remove the watch from its case.
- Be sure to save the three buttons that control the watch

### Step 4 — Remove the Battery Holder

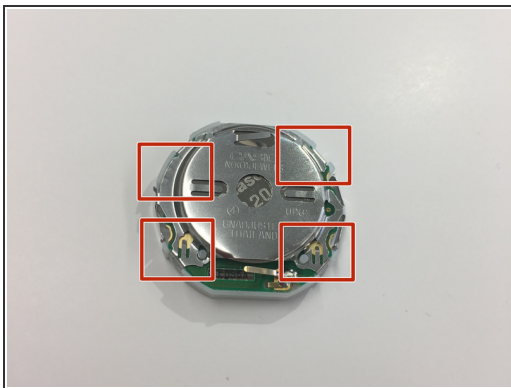


- Remove the Battery Holder surrounding the circuitry of the watch by carefully pulling off each of the four clips.

## Step 5 — Remove the Battery

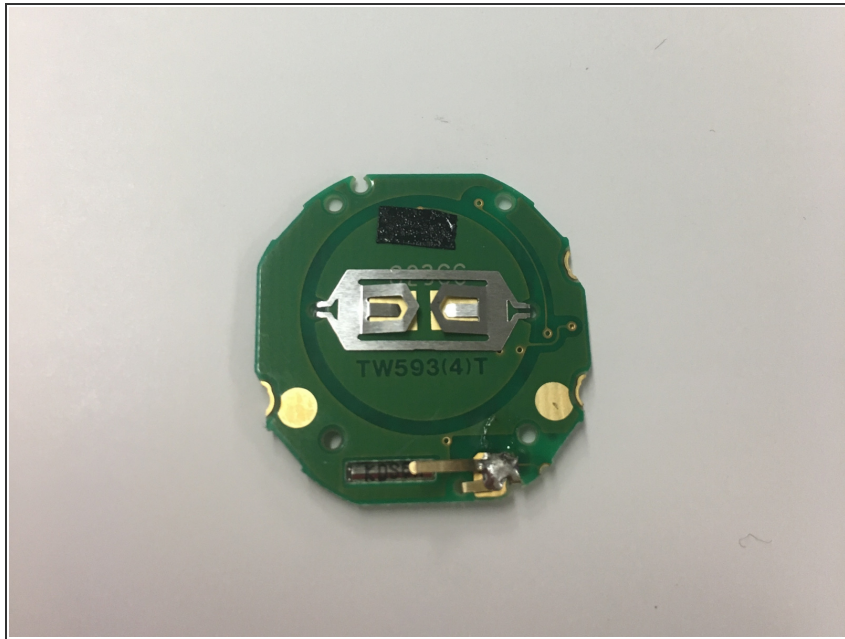


- Remove the battery by pulling from the sides to unstick the adhesive.

## Step 6 — Detach the LCD

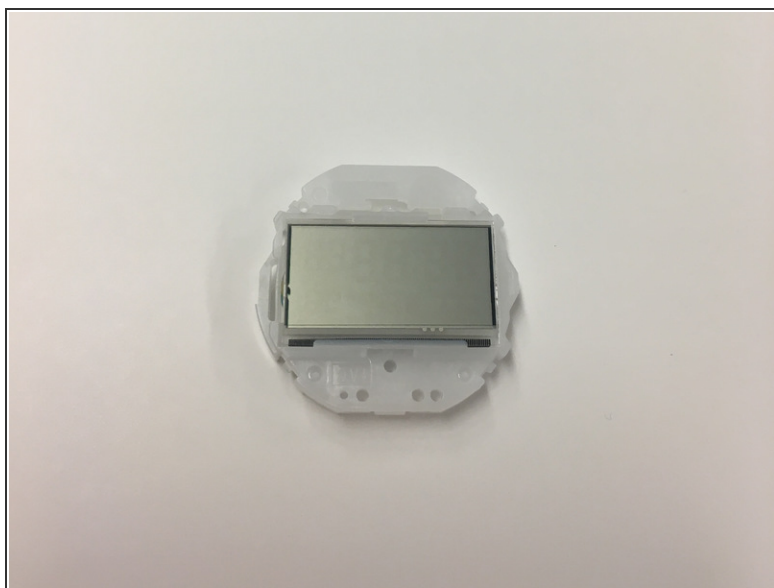

- Remove the four plastic pins connecting the LCD and remove the LCD holder

## Step 7 — Teardown Complete

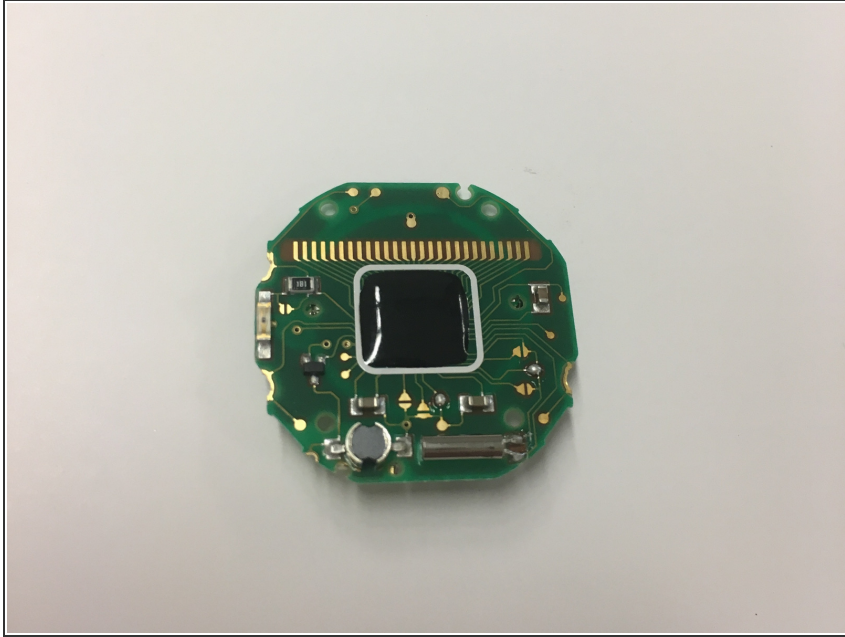

- This reveals the internal circuitry of the watch, and the teardown is complete.

---

This document was last generated on 2017-06-24 07:54:59 PM.